

| Scanner Model                | Group |
|------------------------------|-------|
| <b>Kodak SCANMATE i920</b>   | A     |
| Kodak SCANMATE i940          | A     |
| Kodak SCANMATE i1120         | A     |
| Kodak SCANMATE i1150/i1150WN | A     |
| Kodak SCANMATE i1180         | A     |
| <br>                         |       |
| Kodak i1190/i1190e/i1190WN   | A     |
| <br>                         |       |
| Kodak i2400/i2420            | A     |
| Kodak i2600/i2620            | A     |
| Kodak i2800/i2820            | B     |
| Kodak i2900                  | B     |
| Kodak i3200                  | C     |
| Kodak i3250                  | C     |
| Kodak i3300                  | C     |
| Kodak i3400                  | D     |
| Kodak i3450                  | D     |
| Kodak i3500                  | D     |
| Kodak i4200/i4200 Plus       | DX    |
| Kodak i4250                  | DX    |
| Kodak i4600/i4600 Plus       | E     |
| Kodak i4650                  | E     |
| Kodak i4850                  | E     |
| Kodak i5200/i5200V           | E     |
| Kodak i5250/i5250V           | E     |
| Kodak i5600/i5600V           | F     |
| Kodak i5650/i5650V/i5650S    | F     |
| Kodak i5800/i5850/i5850S     | G     |
| <br>                         |       |
| Kodak Ngenuity 9090          | E     |
| Kodak Ngenuity 9125          | E     |
| Kodak Ngenuity 9150          | F     |
| Kodak Truper 3200/3210       | D     |
| Kodak Truper 3600/3610       | D     |

| Scanner Model                   | Group |
|---------------------------------|-------|
| <b>Kodak/Alaris E1025</b>       | A     |
| Kodak E1030                     | A     |
| Kodak/Alaris E1035              | A     |
| Kodak E1040                     | A     |
| Kodak/Alaris S2040              | A     |
| Kodak/Alaris S2050              | A     |
| Kodak/Alaris S2060w             | A     |
| Kodak/Alaris S2070              | A     |
| Kodak/Alaris S2080w             | B     |
| <br>                            |       |
| Kodak S2085f                    | B     |
| Kodak S3060/S3060f              | C     |
| Kodak S3080                     | C     |
| Kodak S3090                     | C     |
| Kodak S3100/S3100f              | C     |
| Kodak S3110                     | C     |
| Kodak S3120                     | D     |
| Kodak S3120 Max                 | D     |
| Kodak S3140 Max                 | DX    |
| Kodak S3000P/S3000D/S3000S      | C     |
| <br>                            |       |
| Kodak Capture Pro Auto Import * | E     |

\* Auto Import functionality is also available in the **Capture Pro Software Auto Import Edition**. Please note that scanning is not supported in the Auto Import Edition.

| Scanner Model                 | Group |
|-------------------------------|-------|
| <b>Avision AV220C2/D2+</b>    | A     |
| Avision AD230                 | A     |
| Avision AD240                 | A     |
| Avision AD250                 | B     |
| Avision AD260                 | A     |
| Avision AD280                 | B     |
| Avision AD8120                | D     |
| Avision AD8150                | DX    |
| Avision AV320/AV320+/AV320D2+ | B     |
| Avision AV3850SU              | B     |
| Avision AV8350                | D     |
| <b>Bell &amp; Howell 2138</b> | D     |
| Bell & Howell Truper 3200     | D     |
| Bell & Howell Truper 3600     | D     |
| Bell & Howell Ngenuity 9090   | E     |
| Bell & Howell Ngenuity 9125   | E     |
| Bell & Howell Ngenuity 9150   | F     |
| <b>Brother ADS-2000</b>       | A     |
| Brother ADS-2100              | A     |
| Brother ADS-2500W             | A     |
| Brother ADS-2600W             | A     |

| Scanner Model                      | Group |
|------------------------------------|-------|
| <b>Canon DR-2010C</b>              | A     |
| Canon DR-2050C                     | A     |
| Canon DR-2080C                     | A     |
| Canon DR-2510C                     | A     |
| Canon DR-2580C                     | A     |
| Canon DR-3010C                     | A     |
| Canon DR-C120/F120                 | A     |
| Canon DR-C125                      | A     |
| Canon DR-C130                      | A     |
| Canon DR-C225/225W                 | A     |
| Canon DR-C230/C240                 | A     |
| Canon DR-M140                      | A     |
| Canon DR-M160/M160II               | B     |
| Canon DR-M1060                     | C     |
| Canon DR-M260                      | B     |
| Canon DR-4010C                     | B     |
| Canon DR-5010C                     | D     |
| Canon DR-5020                      | D     |
| Canon DR-5060F                     | D     |
| Canon DR-5080C                     | D     |
| Canon DR-6010C                     | B     |
| Canon DR-6030C/6050C               | D     |
| Canon DR-6080C                     | D     |
| Canon DR-7080C/7090C               | D     |
| Canon DR-7550C                     | DX    |
| Canon DR-7580                      | D     |
| Canon DR-9050C/9080C               | E     |
| Canon DR-X10C (with and w/out VRS) | E     |
| Canon DR-G1100                     | DX    |
| Canon DR-G1130                     | E     |
| Canon DR-G2090                     | D     |
| Canon DR-G2110                     | DX    |
| Canon DR-G2140                     | E     |

| Scanner Model          | Group |
|------------------------|-------|
| <b>Epson GT 1500</b>   | A     |
| Epson GT-S50           | A     |
| Epson GT-S55           | A     |
| Epson GT-S80           | A     |
| Epson GT-S85           | A     |
| Epson GT-20000         | A     |
| Epson DS-510           | A     |
| Epson DS-530           | A     |
| Epson DS-760           | A     |
| Epson DS-770/DS-770 II | A     |
| Epson DS-860           | B     |
| Epson DS-30000         | C     |
| Epson DS-50000         | B     |
| Epson DS-60000         | B     |
| Epson DS-70000         | D     |

| Scanner Model             | Group |
|---------------------------|-------|
| <b>Fujitsu fi-4340C</b>   | B     |
| Fujitsu fi-5110C          | A     |
| Fujitsu fi-5120C          | A     |
| Fujitsu fi-5220C          | A     |
| Fujitsu fi-5650C          | D     |
| Fujitsu fi-5750C          | D     |
| Fujitsu fi-5900C          | E     |
| Fujitsu fi-5950           | E     |
| Fujitsu fi-60F            | A     |
| Fujitsu fi-6110           | A     |
| Fujitsu fi-6130/6130Z     | A     |
| Fujitsu fi-6140/6140Z     | B     |
| Fujitsu fi-6230/6230Z     | A     |
| Fujitsu fi-6240/6240Z     | B     |
| Fujitsu fi-6400           | DX    |
| Fujitsu fi-6670/6670A VRS | DX    |
| Fujitsu fi-6750           | DX    |

| Scanner Model                          | Group |
|--|-------|
| <b>Fujitsu/Ricoh fi-6770/6770A VRS</b> | DX    |
| Fujitsu/Ricoh fi-6800                  | E     |
| Fujitsu/Ricoh fi-7030                  | A     |
| Fujitsu/Ricoh fi-7140                  | A     |
| Fujitsu/Ricoh fi-7160                  | B     |
| Fujitsu/Ricoh fi-7180                  | B     |
| Fujitsu/Ricoh fi-7240                  | A     |
| Fujitsu/Ricoh fi-7260                  | B     |
| Fujitsu/Ricoh fi-7280                  | B     |
| Fujitsu/Ricoh fi-7460                  | C     |
| Fujitsu/Ricoh fi-7480                  | D     |
| Fujitsu/Ricoh fi-7600                  | DX    |
| Fujitsu/Ricoh fi-7700                  | DX    |
| Fujitsu/Ricoh fi-7800                  | DX    |
| Fujitsu/Ricoh fi-7900                  | E     |
| Fujitsu/Ricoh fi-800r                  | A     |
| Fujitsu/Ricoh fi-8150                  | A     |
| Fujitsu/Ricoh fi-8170                  | B     |
| Fujitsu/Ricoh fi-8190                  | B     |
| Fujitsu/Ricoh fi-8250                  | A     |
| Fujitsu/Ricoh fi-8270                  | B     |
| Fujitsu/Ricoh fi-8290                  | B     |
| Fujitsu/Ricoh fi-8820                  | DX    |
| Fujitsu/Ricoh fi-8930                  | E     |
| Fujitsu/Ricoh fi-8950                  | E     |
| Fujitsu SP-1120                        | A     |
| Fujitsu SP-1125                        | A     |
| Fujitsu SP-1130                        | A     |

| Scanner Model                              | Group |
|--|-------|
| <b>Hewlett-Packard ScanJet Pro 3000 s4</b> | A     |
| Hewlett-Packard ScanJet 4500               | A     |
| Hewlett-Packard ScanJet 5000               | A     |
| Hewlett-Packard ScanJet 5590               | A     |
| Hewlett-Packard ScanJet 7000               | B     |
| Hewlett-Packard ScanJet 7500               | B     |
| Hewlett-Packard ScanJet 7650               | A     |
| Hewlett-Packard ScanJet 7800               | A     |
| Hewlett-Packard ScanJet N6350              | A     |
| Hewlett-Packard ScanJet N7710              | B     |
| Hewlett-Packard ScanJet N8420              | A     |
| Hewlett-Packard ScanJet N8460              | B     |
| Hewlett-Packard ScanJet N9120              | D     |
| <b>Hitachi HT-4139</b>                     | F     |
| <b>IBML ImageTrac DS-1155</b>              | G     |
| IBML ImageTrac DS-1210                     | G     |
| <b>InoTec Scamax 401/402/403 Series</b>    | E     |
| InoTec Scamax 411/412/413 Series           | E     |
| InoTec Scamax 421/422/423 Series           | F     |
| InoTec Scamax 433 Series                   | G     |
| InoTec Scamax 510 Series                   | G     |
| InoTec Scamax 515 Series                   | G     |
| InoTec Scamax 601                          | DX    |
| InoTec Scamax 611                          | E     |
| InoTec Scamax 621                          | F     |
| InoTec Scamax 631                          | G     |
| <b>Plustek PS406/PS406U</b>                | A     |
| Plustek PS406U Pro                         | A     |
| <b>ScanOptics SO Series</b>                | G     |

| Scanner Model              | Group |
|----------------------------|-------|
| <b>Panasonic KV-S1015C</b> | A     |
| Panasonic KV-S1020         | A     |
| Panasonic KV-S1025         | A     |
| Panasonic KV-S1026C        | A     |
| Panasonic KV-S1027         | A     |
| Panasonic KV-S1045C        | A     |
| Panasonic KV-S1046C        | A     |
| Panasonic KV-S1057         | B     |
| Panasonic KV-S1065C        | B     |
| Panasonic KV-S2087         | B     |
| Panasonic KV-S3065 CL/CW   | D     |
| Panasonic KV-S4065C CL/CW  | DX    |
| Panasonic KV-S4085C CL/CW  | E     |
| Panasonic KV-S5046H        | D     |
| Panasonic KV-5055C         | D     |
| Panasonic KV-5076H         | DX    |
| Panasonic KV-S6050W        | D     |
| Panasonic KV-S6055W        | D     |
| Panasonic KV-S7077         | C     |
| Panasonic KV-S7097         | D     |
| Panasonic KV-S8127         | E     |
| Panasonic KV-S8147         | E     |
| <b>Xerox Documate 3460</b> | B     |
| Xerox Documate 3640        | B     |
| Xerox Documate 4440        | A     |
| Xerox Documate 4760        | D     |
| Xerox Documate 4790        | DX    |
| Xerox Documate 4799        | E     |
| Xerox Documate 4830        | C     |
| Xerox Documate 5445        | A     |
| Xerox Documate 5460        | B     |
| Xerox Documate 6440        | A     |
| Xerox Documate 752         | D     |
| Xerox W130                 | E     |